

Acuview Software Demo Instructions

Acuview software is setup and reporting software that works with any Acuvim power meter with MODBUS communications.

You can download a copy of the software to evaluate. A remote demonstration meter is available for you to connect to. Instructions and a demonstration video on how to use the software is available to help you.

Downloading the Software

You can download the Acuview software here:

http://www.powermeterstore.com/crm_uploads/acuview.exe

Connecting to the Meter

Once you have installed the Acuview Software, use the Connection Manager to setup the following connection:

Set the 'TYPE' of connection to 'Network' and enter the following settings:

IP Address 76.65.212.248

Modbus Port 502

Scan Interval 500 (this is the number of milliseconds between updates)

Click 'OK' when you are done.

In the next dialog box, set the following:

Device Type Acuvim II

Device Address 1

Enter any description. Click 'OK'.

Finally, click the 'Connection' link in the menu and choose 'Connect'.

You are now connected to an Acuvim II meter located in Toronto, Canada.